



OPERATION INSTRUCTIONS

BULLSEYE is constructed from solid brass with Nickel Chrome plating on the outside and corrosion resistant working parts. It has a 32 ounce liquid capacity and can be used with most water, oil and solvent based materials.

- 1) ALWAYS DEPRESSURIZE SPRAYER BEFORE REMOVING ANY PARTS. The pressure may be let out of the sprayer one of the two following ways:
 - a) Tip the sprayer upside down and depress the trigger until no pressure is left. If some liquid is left in the sprayer when you attempt this procedure make sure you aim the nozzle at a place where a little bit of liquid can be expelled.
 - b) Remove black cap from filler cap and use small probe to depress the valve core until all the pressure escapes. NOTE: Make sure the sprayer is upright and the filler cap stem is pointing away from you when depressing the valve core.
- 2) Remove the hex filler cap once all the air has been let out of the sprayer.
- 3) Fill sprayer 2/3 full (32 ounce maximum liquid capacity) with light, clean liquid. Make sure the liquid you are putting into the sprayer is CLEAN and FREE OF FOREIGN PARTICLES.
- 4) Replace hex filler cap and tighten.
- 5) Charge sprayer with compressed air by holding standard air chuck on valve stem of the filler cap. Hold the air chuck on the filler cap until you hear the line pressure equalize with the sprayer. Working pressure is 80-150 psi. At least 80 psi is needed to spray the full 32 oz. without a recharge of air. MAXIMUM PRESSURE SHOULD NOT EXCEED 200 PSI.
- 6) BULLSEYE compact sprayer is now ready for use. For best results, the liquid to be sprayed should be lighter than a No. 10 motor oil. Standard Liquiguard PC and Liquiguard PC (AL) are perfectly suited for spraying using BullsEye. In case of the Plus or Concentrate materials, please dilute per instructions provided with the coating.

CAUTION: Never point the nozzle of sprayer toward yourself or another person. Always point the nozzle of the sprayer away from yourself and toward your intended target before depressing the trigger.